

Technical Definition

Compression Test - Aluminium 2024

You shall respect the HSE policy of your laboratory for each performed test.

Please read these instructions carefully BEFORE starting the tests.

- 1. Five blanks (Ø 20 x 45 mm) are supplied to each participant 5 results must be provided. If one result is missing your test will be considered as an outlier. A RCA shall be completed.
- 2. The specimens shall be machined in accordance with the requirements of ASTM E9-19 (2019).
- 3. All tests are to be performed in accordance with the methods of ASTM E9 19 (2019).

<u>Temperature</u>: Room Temperature <u>Testing speed:</u> 0.005 mm/mm/minute

The tests shall be performed respecting the following conditions:


- One operator only
- One testing machine only
- Tests performed in sequence
- 4. The following information is to be reported:

Characteristic	Unit	Significant digits	Mandatory / Not mandatory	Evaluated Yes/no
Test fixture and lubricant	N/A	N/A	Mandatory	No
Testing machine ID	N/A	N/A	Mandatory	No
Means of strain measurements (extensometer or gauges)	N/A	N/A	Mandatory	No
Speed of testing	mm/mm/min	X,XXX	Mandatory	No
Stress-strain diagram	N/A	N/A	Mandatory	No
Compressive yield strength at 0,2% offset	MPa	xxx	Mandatory	Yes
Modulus of elasticity	GPa	XX,X	Mandatory	For information only

All evaluated characteristics will be analysed according to the algorithm A and S (ISO 13528 – 202) and evaluated using z-score.

5. Testing shall start **as soon as test specimens are received**. Please contact the following e-mail address for any technical or administrative query.

Submission date :	August 15 th , 2023	
Technical and administrative	info@ptpscheme.com	
support :		

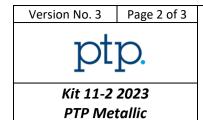


Technical Definition

Compression Test - Aluminium 2024

6. Instructions for submission of results are detailed on the website:

https://ptpscheme.com

- 7. To ensure the confidential treatment of your results in the final report, you will be allocated a unique identity number when you register for the program.
- 8. Collusion and falsification of your PTP results are totally forbidden. In case of identification or suspicion of collusion or falsification, the laboratory will be excluded from the program and the sponsors will be immediately informed. The sponsors could ask you proofs of your records and analyses, so be sure to conserve data, curves and specimens.
- 9. The tested specimens do not need to be sent back to the PTP office.

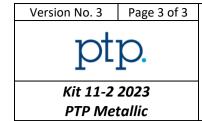

Technical Definition

Compression Test - Aluminium 2024

APPENDIX: Instructions for IRR participation

The Internal Round Robin participation (IRR) is **optional** and **independent** from your PTP participation. <u>Confidentiality</u>: The IRR results and reports are confidential and only accessible by your laboratory. They are not shared with the scheme sponsors or any other accreditation or certification bodies.

The extra samples shall be tested according to the following table:

	Operator 1	Operator 2	Operator 3	Operator 4	Operator X
Test machine 1	PTP kit (5 samples)	3 samples	3 samples	3 samples	3 samples
Test machine 2	3 samples				
Test machine 3	3 samples				
Test machine Y	3 samples				

Operator 1 (OP1) is to be the most experienced operator currently conducting tests on a regular basis and shall perform tests on all machines (TM1, TM2, TM3...)

Test Machine 1 (TM 1) is to be the most utilised machine for this test in your laboratory and shall be tested by all operators (OP1, OP2, OP3...)

<u>Example:</u> A laboratory has 2 operators and 3 test machines. They receive a PTP kit and 9 extra specimens.

Operator 1 shall test the PTP kit on TM1, 3 specimens on TM2 and 3 specimens on TM3.

Operator 2 shall test 3 specimens on TM1.

The IRR results have to be submitted on a separate results form available on the PTP website. The identification of operators and test machines you provide will appear on the IRR final report. These identifications will not be seen by other laboratories.

The IRR results will be classified against the acceptance classes of the kit 11-2-2023.

<u>Reminder:</u> Laboratories are not permitted to switch specimens between the PTP kit and IRR samples. The traceability of the samples will be checked during the evaluation. Laboratories found to have switched samples will invalidate their PTP participation.

VERSION HISTORY

Issue Date	Issue N°	Changes
19/12/2022	1	Document creation
23/05/2023	2	Update of results submission deadline
17/07/2023	3	Submission date update